


## COIL CONNECTIONS (NO BALLAST RESISTOR)

[ENGINE SECTION] #920 TO COIL + (IGN. POWER)

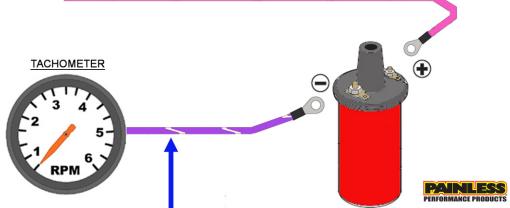

[ENGINE SECTION] <<COIL(-) #923 TACHOMETER SIGNAL >>[INSTRUMENT PANEL]