



GM STARTER CONNECTIONS

TO BALLAST RESISTOR **BALLAST RESISTOR BYPASS (PROVIDED BY INSTALLER)**

FROM NEUTRAL SAFETY/
IGNITION SWITCH

STARTER "S" TERMINAL #919 IGNITION SWITCH "START"