

#927 TO FRONT
PARK LIGHTS

#907 HEADLIGHT
POWER

To have Front Park
lights remain on
when headlights are
on, move the 927
wire to the 929 (rear
tail lights) terminal.

#961 DOME LIGHT
GROUND

#928 HEADLIGHT
POWER TO
SWITCH

#929 TO REAR
TAIL LIGHTS

#930 INSTRUMENT
PANEL LIGHTING

