
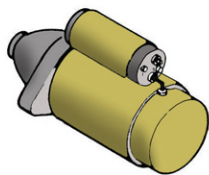


BALLAST RESISTOR CONNECTIONS

To "I" terminal on starter solenoid or "R" terminal on a GM style starter

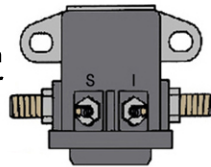

[ENGINE SECTION] #920 TO COIL + (IGN. POWER)

BALLAST RESISTOR BYPASS WIRE (SOME HARNESSES WILL REQUIRE THIS TO BE PROVIDED BY INSTALLER)

TACHOMETER



[ENGINE SECTION] <<COIL(-) #923 TACHOMETER SIGNAL >>[INSTRUMENT PANEL]