

PAINLESS[®]

PERFORMANCE PRODUCTS



Wire Harness Installation Instructions

For Installing Harness Numbers:

60221: 03 – 06 GM Gen III 4.8/5.3/6.0L EFI Harness - Throttle by Wire

Manual P/N 90570

Painless Performance Products recommends you, the installer, read this installation manual from front to back before installing this harness.

Painless Performance Products, LLC
2501 Ludelle St.
Fort Worth, TX 76105-1036
PHONE: 800-423-9696 FAX: 817-244-4024
EMAIL: support@painlessperformance.com

If you have any questions concerning the installation of this harness, feel free to call Painless Performance Products' Tech Line at 1-800-423-9696. The Tech Line can be reached from 8 A.M. to 5 P.M. central time, Monday through Thursday, and 8 A.M. to 4:30 P.M. on Fridays.

We have attempted to provide you with as accurate of instructions as possible and are always concerned about corrections or improvements that can be made. If you have found any issues or omissions, or simply have comments or suggestions concerning these instructions, please write us at the above address, send us a fax at (817) 244-4024, or email us at support@painlessperformance.com. We sincerely appreciate your business.

Painless Performance Products, LLC shall in no event be liable in contract or tort (including negligence) for special, indirect, incidental, or consequential damages, such as but not limited to, loss of property damage, or any other damages, costs or expenses which might be claimed as the result of the use or failure of the goods sold hereby, except only the cost of repair or replacement.

3rd Edition: July 2021
Copyright © 2019 by Painless Performance Products, LLC

CAUTION: BEFORE THE REMOVAL OF YOUR ORIGINAL HARNESS AND/OR THE INSTALL OF YOUR NEW PAINLESS HARNESS, DISCONNECT THE POWER FROM YOUR VEHICLE BY REMOVING THE NEGATIVE OR POSITIVE BATTERY CABLE FROM THE BATTERY.

TABLE OF CONTENTS

<u>PAGE #</u>	<u>SECTION</u>
5	<u>INTRODUCTION</u>
5	<u>ECM PROGRAMMING</u>
6	<u>TOOLS NEEDED</u>
6	KIT CONTENTS
7	<u>PRE-INSTALLATION AND HARNESS ROUTING GUIDELINES</u>
7	HARNESS ATTACHMENT
8	<u>GROUNDING THE VEHICLE</u>
8	<u>INSTALLATION INSTRUCTIONS</u>
8	FUSE BLOCK, ECM, TAC MODULE, PEDAL MOUNTING AND CONNECTIONS
9	DASH PORTION; INFORMATION & INSTALLATION
12	ENGINE CONNECTION
17	<u>TAIL/TRANSMISSION GROUP INSTALLATION</u>
18	TRANSMISSION FUNCTION
19	CONVERTING THE 4L60E TRANSMISSION CONNECTOR TO A 4L80E CONNECTOR
20	<u>CONCLUSION</u>
20	THINGS TO REMEMBER
20	RETRIEVING TROUBLE CODES FROM THE COMPUTER
21	TROUBLE SHOOTING GUIDE FOR YOUR PAINLESS PERFORMANCE HARNESS
23	<u>LIMITED WARRANTY AND RETURN POLICY</u>

LIST OF FIGURES

<u>PAGE #</u>	<u>SECTION</u>	<u>FIG. #</u>
6	CONTENT OF THE 60221	1
9	ACCELERATOR PEDAL	2
9	TAC MODULE CONNECTIONS	3
10	DATA LINK CONNECTOR	4
10	CRUISE CONTROL	5
11	BRAKE SWITCH CONNECTIONS	6
11	BRAKE SWITCH RELAY	7
12	'03 & '04 KNOCK SENSOR CONNECTION	8
13	CRANKSHAFT POSITION SENSOR	9
14	CAM PROSITION SENSOR	10
14	MAP SENSOR	11
14	DRIVER SIDE COIL CONNECTOR	12
14	PASSENGER SIDE COIL CONNECTOR	13
15	ECT SENSOR	14
15	ALTERNATOR	15
15	MAF/IAT SENSOR	16
16	INJECTORS 1, 3, 5, & 7	17

Continued...

LIST OF FIGURES

<u>PAGE #</u>	<u>SECTION</u>	<u>FIG. #</u>
16	INJECTORS 2, 4, 6, & 8	18
18	PARK/NEUTRAL POSITION SWITCH	19
19	VSS SENSOR (4L60E)	20
19	VSS & INPUT SPEED SENSOR, TRANSMISSION CONNECTION (4L80E)	21
19	4L60E/65E TRANSMISSION CONNECTION	22
20	TRANSMISSION CONNECTOR PIN-OUT	23
22	NOID LIGHT	24

INTRODUCTION

You have purchased what we at Painless Performance Products believe to be the most up-to-date and easiest-to-install automotive fuel injection harness on the market. It is designed for easy installation, even if you have no electrical experience.

This harness is designed to be a complete wiring system for the fuel injection system used on General Motors 2003 - 2006 4.8L, 5.3L, & 6.0L Electronic Throttle, also known as Throttle by Wire or Fly by Wire, engines and to control the 4L60E, 4L65E, 4L80E, 4L85E automatic transmissions. This includes all wiring that is needed by the computer to run and control the injection system and transmission.

Most of the wiring in the harness has been pre-terminated and had the proper connector pre-installed, also all wire has been GM color-coded. **Note: Wire color (Example: Black/White) is one wire with a stripe. In the case of the example shown, Black/White represents a black wire with a white stripe. The second color (the stripe) may not be bold. Observe all two-color wires closely.** All wiring is TXL, 600 volt, and 125 degree centigrade with cross-link insulation.

DO NOT RECONNECT THE BATTERY CABLES UNTILL THE ENTIRE HARNESS HAS BEEN INSTALLED. At no point during the install should you power the system or reconnect the battery, fault codes will be set in the ECM if done so. Power is not to be applied to the Painless harness until the entire installation is done.

ECM PROGRAMMING

You must use one of the following computer part numbers 89017733, 12576106, 12583560, or 12602802 with this harness.

No matter what changes are made to the engine and even if it is remaining factory original or "stock" the vehicle's ECM, or computer, must be re-programmed before engine start up. The vehicle absolutely will not start and run until this is done due to the anti-theft **Passlock programming**. This harness along with the removal of the Passlock software will get the Vortec engine and transmission up and operating.

The computer's program must have the emissions portion turned off or removed*. It is recommended that you also have the computer reprogrammed to remove anything in the original factory programming that relates to a device or devices that are not being used in your particular vehicle. Most likely the check engine light will come on and stay on when using a computer without removing the programming for any unused devises.

NOTE: *This harness is not emissions legal. The 2003–2006 4.8L, 5.3L & 6.0L TBW Vortec engines had four oxygen sensors from the factory, but we have provisions for only two, one on the driver side and one on the passenger side of the engine. We removed the two rear oxygen sensors since they originally where behind the catalytic converters and most people don't want to run more than two oxygen sensors.

NOTE: Most remanufactured computers come without any programming in them and must be programmed before they can be used.

NOTE: The program in your computer must match the transmission that you plan on using, the 4L60E, 4L65E, 4L80E, 4L85E, or a manual transmission (if you are using a manual transmission or a non-electronic automatic transmission)

TOOLS NEEDED

In addition to your regular tools, you will need, at least, the following:

Crimping tool
Wire stripper
Continuity tester

NOTE: USE A QUALITY TOOL TO AVOID OVER-CRIMPING.

CAUTION: DO NOT USE A TEST LIGHT TO TEST THE COMPUTER OR SENSOR WIRING OR YOU WILL DAMAGE THE COMPUTER.

Electric drill
1 5/8" Hole saw

NOTE: for the rubber grommet in the firewall.

KIT CONTENTS

Take inventory to see that you have everything you are supposed to have in this kit, if anything is missing, contact the dealer where you obtained the kit or contact Painless Performance at (800) 423-9696 or (817) 244-6898.

The kit should contain the following items:

- The main wire harness
- Fuel Injection Installation Instructions P/N 90570 (This Booklet)
- 4" & 7" tie wraps, fuse block mounting bracket & screws, brake switch, splices and terminals
- TAC Module to Accelerator Pedal Pigtail, Gas Injector Harness, Flex Fuel Injector Harness, '05-'06 Knock Sensor Pigtail

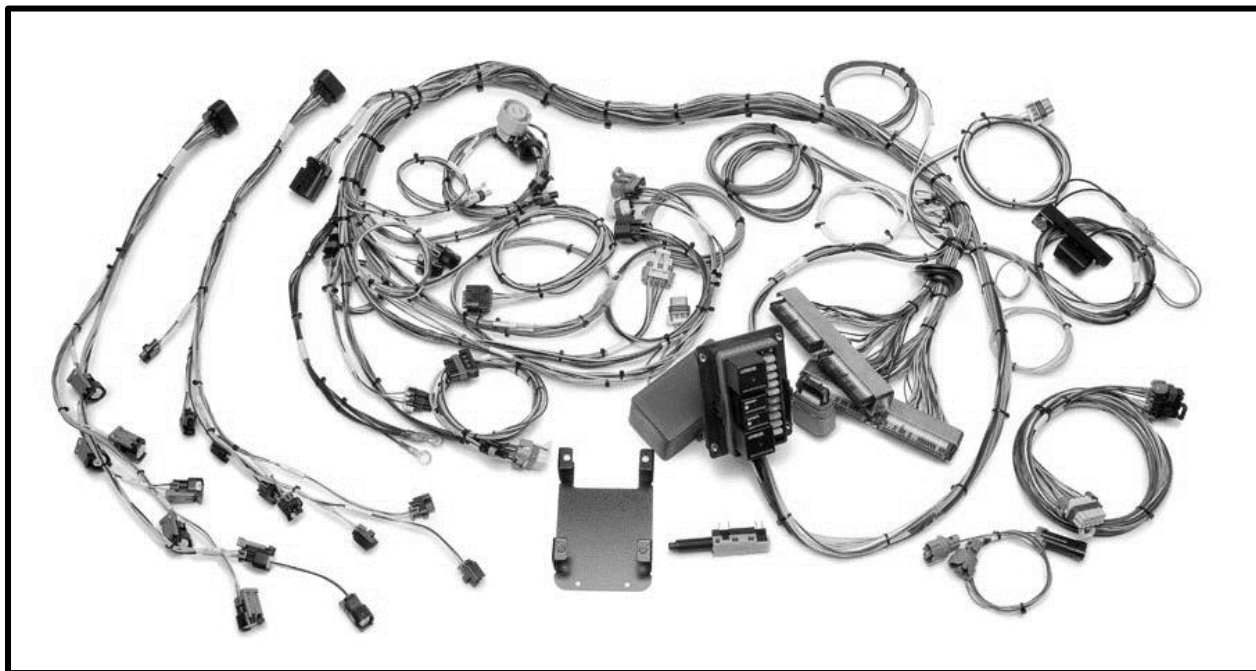


Figure 1 Content of the 60221

PRE-INSTALLATION AND HARNESS ROUTING

GUIDELINES

Familiarize yourself with the harness by locating each of the harness groups and by looking at the connectors on the wire ends. A good exercise is to lay out the wire harness on the floor and identify all the connectors, sections, and wires.

Disconnect the battery if it has not already been disconnected. The sensors and control systems used by electronic fuel injected vehicles are very sensitive. Any shorts can and will cause severe damage to these components.

The installation of your harness kit will consist of two parts:

- The physical routing, positioning, securing, group/ individual wires and connectors.
- The proper electrical connection of the individual circuits.

We cannot tell you how to route the harness in your vehicle. That depends a great deal upon the particular make of the automobile and what extent you want to secure and conceal the harness. To help you begin thinking through the installation of your wire harness we can only really offer some general guidelines and routing practices, general installation instructions in, all of which can be found below.

- You will want to route the harness through and around open areas. Inside edges provide extra protection from hazards and also provide places for tie wraps, clips, and other support.
- Route the harness away from sharp edges, exhaust pipes, and the hood, trunk, and door hinges.
- Plan where harness supports will be located. Use a support or zip tie approximately every 6 inches.
- Allow enough slack in the harness at places where movement could possibly occur (body to frame, frame to engine, etc.)

HARNESS ATTACHMENT

NOTE: Harness routing and shaping will be a time-consuming task. Taking your time will enhance the beauty of your vehicle. Please take your time and be patient.

Mold harness groups to the contour of the dash, engine, frame, etc. Remember to route the harness away from sharp edges, exhaust pipes, hinges, and moving parts.

Attach harness groups to your vehicle with clips or ties starting at the computer and working your way outward.

Note: Do not tighten tie wraps or mounting devices until the entire harness is installed. Make all harness attachments LOOSELY.

Connecting the wires and connectors throughout the harness is a simple process. Make sure that each wire is properly routed and then attached.

When all the wires are attached, tighten the mounts and ties to secure the harness permanently.

When used every 1-1/2" or so on the visible areas of the harness, plastic wire ties make a very attractive assembly. Otherwise, a tie installed in other areas every 6" or so will hold the wires in place securely.

REMEMBER TO TAKE YOUR TIME.

GROUNDING THE VEHICLE

A perfectly and beautifully wired automobile will nevertheless have problems if everything is not properly grounded. Don't go to the effort to installing a quality wire harness only to neglect proper grounding.

NOTE: The installer of this harness is responsible for all ground wires not provided with this part. These grounds are as followed:

- Connect a ground strap or cable (minimum of a 4 Ga. wire) from the negative battery terminal to the chassis (frame).
- Connect a ground strap (minimum of a 4 Ga. wire) from the engine to the chassis (frame). **Do not rely upon the motor mounts to make this connection.**
- Connect a ground strap from the engine to the body.

INSTALLATION INSTRUCTIONS

Fuse Block, ECM, TAC Module, Pedal Mounting and Connections

Below you will find part numbers for parts compatible with this wire harness.

Main Computer	GM #89017733, 12576106, 12583560, or 12602802
TAC Module	GM#12588923
Accelerator Pedal	Delco#15264643

- Decide where and how the ECM, TAC Module, and fuse block will be mounted. In most cases these components can be mounted either under the dash or in the kick panel area. All parts are weatherproof and can be mounted in the engine compartment if necessary.
- Take notice of how much distance the harness will allow for ECM and Fuse Block mounting. A bracket and mounting screws have been included for fuse block mounting. ECM mounting must be handled by the installer.
- The TAC Module and Pedal can both be mounted using the mounting holes found on these components. The TAC Module must be mounted within 96" of the accelerator pedal, due to the length of the pigtail contained in the kit, and within 15" of The ECM due to the length given in the harness.
- Once these locations have been determined, and double checked for accuracy, mount the ECM, Fuse Block, TAC Module, and Accelerator Pedal.
- Drill a 1 $\frac{5}{8}$ " hole for the firewall grommet near the ECM for the engine group and tail section to pass through. If the ECM and fuse block are mounted in the engine compartment, a smaller hole and grommet for the "Dash" portion will be required instead of the 1 $\frac{5}{8}$ " hole. The "Dash" portion of the harness will not be labeled as such, information on identifying this portion can be found on the next page.
- Route the engine group, cooling fan wires, fuel compensation connector (if used, see p. 15), and tail section through the hole. Push the grommet (already installed on the harness) into the hole until it is seated. Again, if the ECM and fuse block are mounted in the engine compartment, the "dash" section of the harness will pass through this hole.
- Route the dash group over to the driver's side of the vehicle if it is not already there.
- Attach both ECM connectors to the computer. **When connecting the plugs to the computer USE EXTREME CARE to make sure none of the pins in the computer are or become bent.**

- Locate the “Accelerator pedal to TAC Module” pigtail. Connect the pedal connector to the accelerator pedal. See **Figure 2**
- Attach the TAC module connection from the “Accelerator pedal to TAC Module” pigtail to the TAC module. Attach the TAC Module connection from the main harness to the TAC module. See **Figure 3**



FIGURE 2 Accelerator Pedal



FIGURE 3 TAC Module Connections

DASH PORTION; INFORMATION & INSTALLATION

The wires in this group consist of the Diagnostic Link Connector or DLC and check engine light (pre-mounted into a mounting bracket), Cruise Control (4 wires), Ignition Voltage source (1 wire), Fuel Test (1 wire), VSS Output (1 wire), A/C Request (1 wire), Brake Switch (3 wires), and Tach (1 wire).

All of these connections, with the exception of the DLC, are open ended wires. These wires will require you, the installer, to crimp on a terminal from the parts kit in order to make the correct connections needed. Follow the instructions given for proper terminal installation.

Terminal Installation Information

- Have all tools and connectors handy.
- Select the correct terminal for the wire and application.
- Determine the correct wire length and cut the wire. Remember to allow enough slack in the harness and wires at places where movement could occur. **DOUBLE CHECK YOUR CALCULATIONS.**
- Strip insulation away from wire. Only strip as much insulation off as necessary for the type of terminal lug you are using.

Note: In the following step, make sure that the terminal is crimped with the proper die in the crimping tool. An improper crimp will not make a good connection. **DO NOT OVER-CRIMP.**

- Crimp the terminal onto the wire and connect.

DLC - The Data Link Connector (**DLC**) is used to communicate with the ECM. The Powertrain, On Board Diagnostic (**OBD**) System Check is an organized approach to identifying a problem created by an electronic powertrain control system malfunction. The Powertrain OBD System Check is the starting point for any drivability concern diagnosis. The Powertrain OBD System Check directs the installer to the next logical step in diagnosing a drivability concern. Understanding and using the Powertrain OBD System Check correctly will reduce the diagnostic time and prevent the replacement of good parts.

- Mount the DLC connector using the bracket that the light is mounted in. Mount it in a position that allows access to the front of the connector and also allows you to see the light while driving.
- The light should illuminate when the ignition is in the “On/Run” position and during engine cranking. If the light is on, while the engine is running, the ECM has thrown a code which may or may not affect drivability. **See Figure 4**

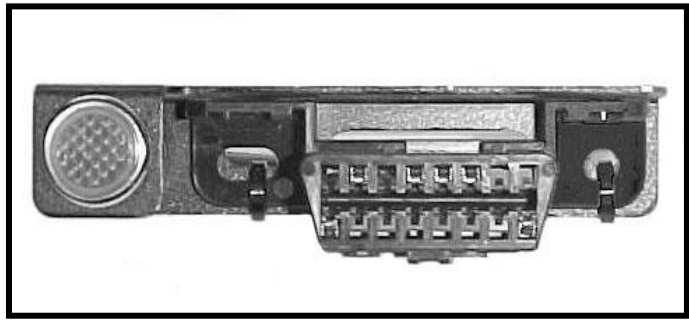


Figure 4 Data Link Connector

Cruise Control- There are four cruise control wires in this harness. Most late model GM steering columns years 1983-1993 already have or can be retrofitted with a cruise control switch. See **Figure 5** for the proper connection of these wires to a factory GM cruise control switch part number **25111262**. This harness kit does not include the connector needed because it has been discontinued by Delphi.

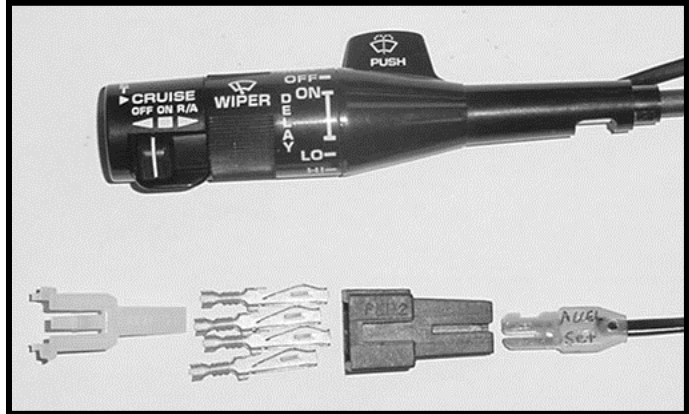


FIGURE 5 Cruise Control

- The **BROWN** wire is power (connector pin A).
- The **GRAY** wire is the *cruise control on* switch signal (connector pin B).
- The **BLUE** wire is the *cruise control set/coast* switch signal (connector pin D).
- The **GRY/BLK** wire is the *cruise control resume/accel* switch signal (connector pin C).

FUSE BLOCK IGNITION - This circuit is used to provide power to the injection system.

- Connect this single Pink wire to a terminal/ wire from the ignition switch that is hot in the **RUN** and **CRANK** positions. Failure to provide power in the crank position will result in PCM shutdown while the engine is trying to start. This wire is simply activating an Ignition Relay in the fuse Block. The coil wire from your chassis harness (#920 Coil B+ found on Painless Chassis harnesses) will be a perfect power source for this IGN wire. *Note: You will know this circuit is properly connected if the **Check Engine Light** is on when the ignition switch is on and while starting.*

FUEL TEST (use as needed) – This will be a single gray wire. This circuit is used to power the electric fuel pump for test purposes only. Temporarily apply fused positive power to this wire for testing the fuel pump. This wire is used to bypass the fuel pump relay found on the fuse block for fuel pump testing and priming.

TACH (optional) - This will be a single white wire. This circuit is used to provide a signal from the ECM to the tachometer. Connect this wire to the signal input on the tachometer. Some may notice an inaccurate RPM reading; consult the tech dept of the tachometer manufacture for compatibility.

VSS OUTPUT (optional) - This will be a single green/white wire, do not get it confused with the green/white A/C Request wire. This circuit is used to provide a signal from the PCM to the electric speedometer. Connect this wire to the signal input on the electric speedometer (not all aftermarket electric speedometers use the same signal for operation. Consult the tech dept of the speedometer manufacture for compatibility).

BRAKE SWITCH – This will be a group of three wires. These circuits are used to provide power to the TCC solenoid in the automatic transmission. These wires will connect to the brake switch terminals that are normally used for cruise control or TCC solenoid (normally closed). **These wires do not connect to the terminals for the brake lights, only the light blue wire will connect to this terminal.**

- If you are using the included brake switch then you will need to install it and wire it according to **Figure 6**. The pink wire to the back of the switch in the illustration is the wire that has power on it whether or not the brake is being applied.
- If your vehicle has a pressure type brake switch, you may use a relay as shown in **Figure 7**. The relay must be a **SPDT Relay** and wired correctly or it could result in a dangerous situation with the vehicle. The torque converter may not unlock.

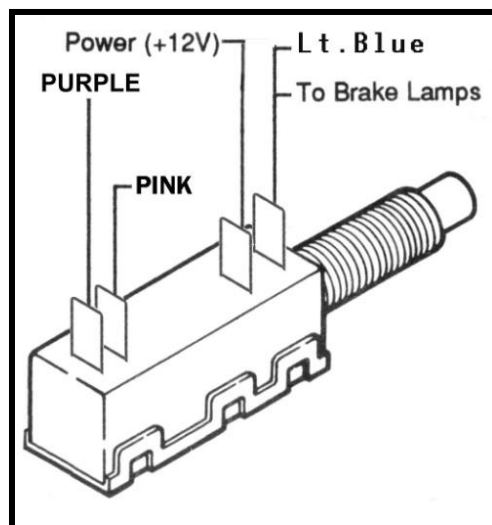
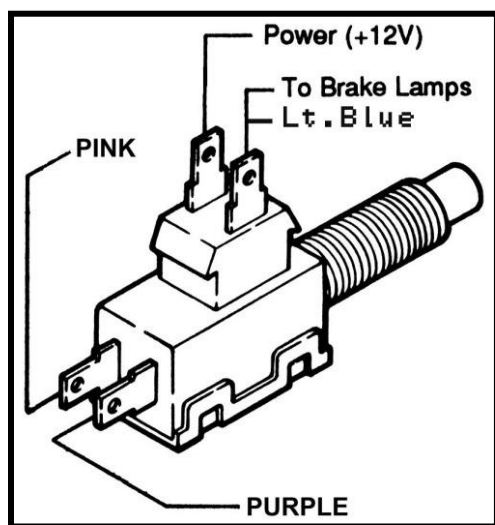


FIGURE 6 Brake Switch Connections

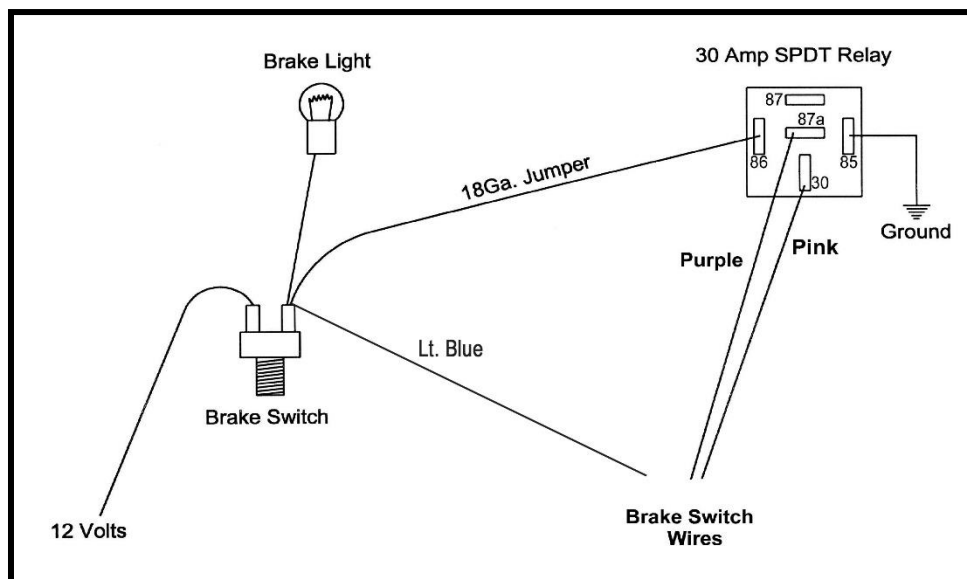


FIGURE 7 Brake Switch Relay

AC REQUEST – This is not a power supply for the compressor. This circuit is used to inform the ECM that the AC compressor has been turned on.

- This will be a single green/white wire; do not get it confused with the green/white VSS Output wire.
- This wire is to be spliced into the circuit from the AC switch to the AC compressor.

ENGINE CONNECTIONS

Painless recommends the use of the listed or equivalent part numbers. These will meet all requirements and are compatible with the Painless harness. The numbers given are GM and AC Delco part numbers for the sensors and components found on the '03 – '06 engines.

MAF/ IAT Sensor	Delco# 213-364
Engine Coolant Temperature	Delco# 213-953
Throttle Body	GM# 12570800
MAP Sensor	Delco# 213-796
Knock Sensor	Delco# 213-362
Coils	GM# 10457730
Cam Position Sensor	GM# 12561211
Crankshaft Position Sensor	Delco# 213-354

The engine group is designed to be separated into left (driver) and right (passenger) sections. Each side is tie-wrapped separately, **BUT NOT LABELED**. The left side of the engine has the connectors for the alternator, driver side coils, mass air flow sensor, and engine coolant sensor, all of which **ARE** labeled. When you begin routing, **FIRST** separate the engine group into left and right sections, and place them accordingly.

NOTE: Before you connect any wires, separate the tail section from the engine group and place it out of the way.

KNOCK – To control spark knock, a Knock Sensor system is used. This system is designed to retard spark timing up to **20 degrees** to reduce spark knock in the engine. This allows the engine to use maximum spark advance to improve drivability and fuel economy.

- This connection is a 2-pin black connector with a Blue and a light blue wire.
- '03 & '04 motors have the knock sensors located under the intake manifold in the lifter valley. This connection can be found coming from a factory pigtail at the back of the intake manifold; as seen in the photo to the left.

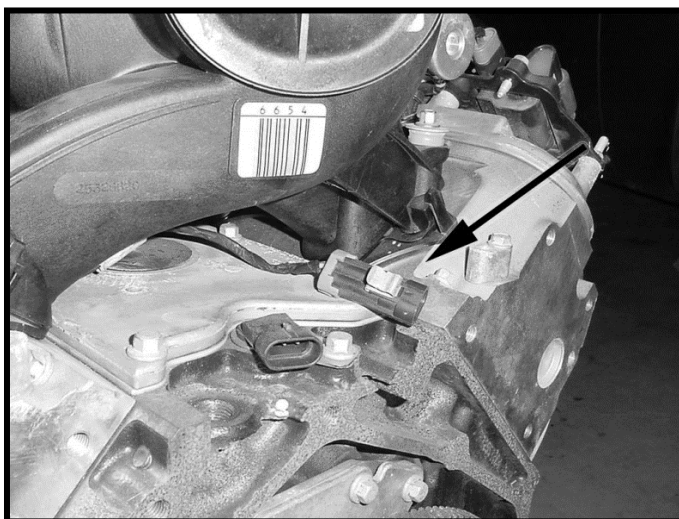


FIGURE 8 '03 & '04 Knock Sensor connection

- '05 & '06 motors have the knock sensors located on each side of the engine block. The knock sensor pigtail included with the Painless harness will need to be plugged into the Knock Sensor connector of the 60221 harness. The dark blue wire of the pigtail will connect to the driver side knock sensor. The light blue wire will connect to the passenger side knock sensor.

CKP – The Crankshaft Position (**CKP**) sensor provides the ECM with crankshaft speed and crankshaft position. The ECM utilizes this information in order to determine if an engine misfire is present. The ECM monitors the CKP sensor for momentary drop in crankshaft speed in order to determine if a misfire is occurring.

- This connection is a 3-pin **NEUTRAL/TAN** connector with **BLUE/WHITE**, **YELLOW/BLACK**, and **LIGHT GREEN** wires.
- The Crank Position Sensor can be found just above the starter. The starter will need to be removed in order to make this connection. This connection can be seen in the photo to the right.

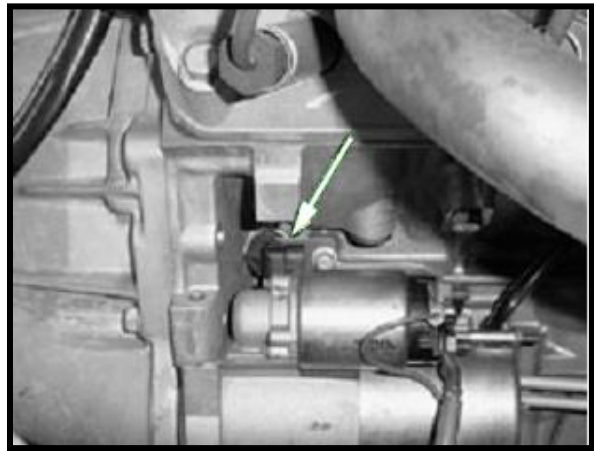


FIGURE 9 Crankshaft Position Sensor

STARTER B+ - These circuits are used to maintain memory in the ECM and provide power to the fuse block and to all heavy amp circuits.

- These wires consist of 2 large gauge red wires with ring terminals pre-installed.
- Connect these wires to the battery post on the starter solenoid (the same post as the positive battery cable) or to a positive high output battery source.

TO STARTER SOL (optional) – This circuit is used to connect the neutral safety switch to the starter solenoid “S” terminal. This is only applicable for those using a 4I60E, 4L65E, 4L80E, or 4L85E transmission.

- This will be a single yellow wire found with the Starter B+ wires.
- Connect this wire to the starter solenoid “S” terminal.

GROUND – These circuits are used to provide ground for the entire Painless harness. This group of wires **MUST** be connected for this harness and your fuel injection system to work properly.

- This group of wires contains three black/white and two black wires, all pre-installed into 3 ring terminals; some wires double up with other wires into one ring terminal.
- Connect these wires under different bolts in the back of the cylinder heads; there are existing holes which can be used for this (will require M10x1.5 bolts). Do not stack these grounds under one bolt, they must be attached to 3 different grounding points for proper operation. For best results from your EFI system, be certain your grounding surfaces are clean and your connections are secure.

CMP- The Camshaft Position (**CMP**) sensor provides the ECM with camshaft speed and position. The ECM monitors the CMP sensor for any momentary drops in camshaft speed in order to determine if a misfire is occurring.

- This connection is a 3-pin black connector with brown/white, pink, and red wires.
- This Camshaft Position Sensor can be found at the back of the engine, behind the intake manifold, as seen in **Figure 10**.

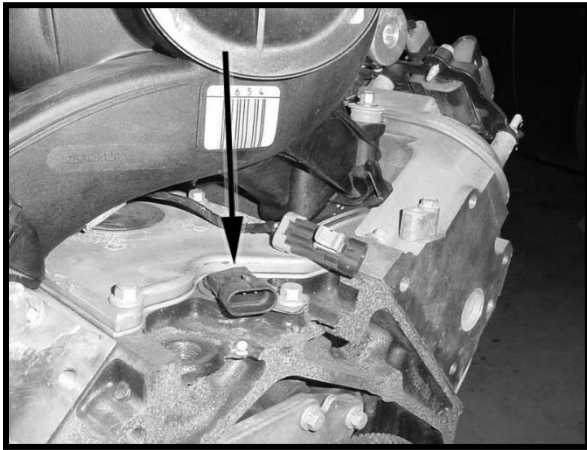


Figure 10 Camshaft Position Sensor



Figure 11 MAP Sensor

MAP – The Manifold Absolute Pressure (**MAP**) sensor responds to changes in the intake manifold pressure as a result of engine load and speed. The map sensor converts this to a voltage output seen by the ECM.

- This connection will be a gray 3 pin connector with gray, light green, and orange/black wires.
- The MAP sensor can be found under the engine cover, on top of the intake manifold, at the rear of the engine, as seen in **Figure 11**.

DRVR. & PASS COILS- The ignition system on this engine is a multiple coil configuration called “coil on plug”. The ignition coil mounting bracket is attached to the rocker cover. The secondary ignition, or spark plug, wires are short compared to a distributor ignition system wire.

- Both of these connections, located on opposite side of the engine breakout, are 7-pin, white connectors.
- The 2-coil connectors found on the Painless harness plug into the large white connectors found on the factory coil harnesses.
- This factory harness can be found on the coil mounting bracket located on the valve cover, see **Figures 12 & 13** below.

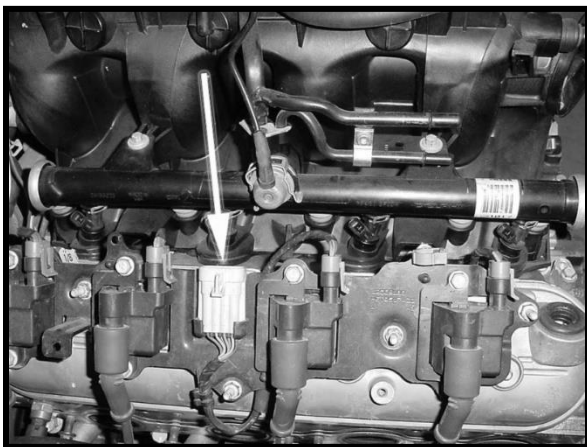


Figure 12 Driver Side Coil Connection

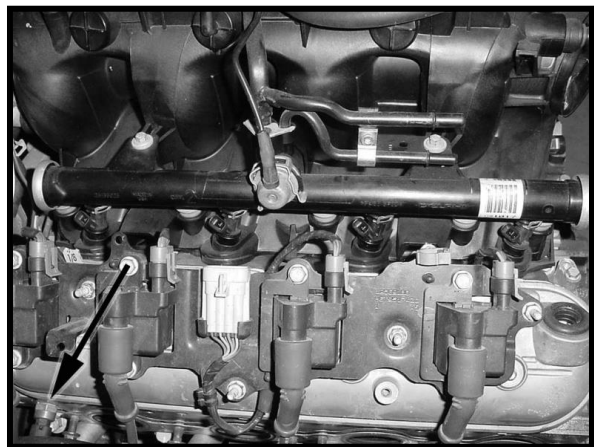


Figure 13 Passenger Side Coil Connection

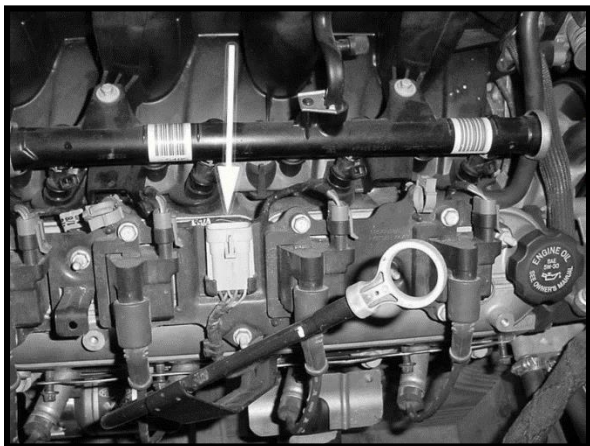


Figure 14 ECT Sensor

ECT – The ECM supplies a **5.0-volt** signal to the Engine Coolant Temperature (**ECT**) sensor through a resistor in the ECM and measures the voltage. The voltage is high when the engine is cold. The voltage is low when the engine is hot. The ECM calculates the engine coolant temperature by measuring the voltage. The engine coolant temperature affects most systems the ECM controls.

- This connection will be a 2-pin black connector with yellow and gray wires.
- This sensor can be found on the side of the head, front driver side, behind the head, front driver side, behind the alternator. It can also be seen to the left in **Figure 14**.

ALT- This circuit is used to excite (turn on) the voltage regulator. When using the stock alternator equipped on the 4.8, 5.3 or 6.0L Vortec engines, this connector will connect into the voltage regulator plug.

- This connection will be a 4-pin connector, but will only have 2 wires going to the center pins. These will be a brown wire and a gray wire.
- The alternator will mount on the upper driver side serpentine bracket.

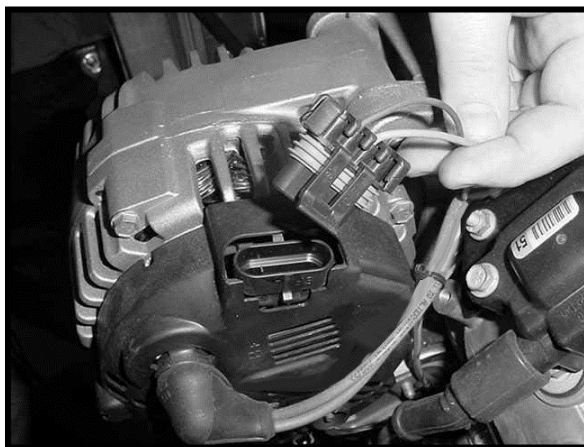


Figure 15 Alternator



Figure 16 Mass Air Flow / Air Intake Temp. Sensor

MAF-IAT – The Mass Air Flow (**MAF**) sensor measures the amount and temperature of the air which passes through the sensor. The ECM uses this information to determine the operating condition of the engine in order to control the fuel delivery. A large quantity of air indicates acceleration. A small quantity of air indicates deceleration or idle.

- This connection will be a black 5 pin connector with black, tan, black/white, yellow, and pink wires.
- The mass air flow will mount in-line of the air intake to the throttle body with the screen end furthest from the throttle body.

THROTTLE BODY- The throttle body receives signal from the TAC Module according to the accelerator pedal position the TAC Module sees. Located inside the throttle body, a throttle position sensor senses the throttle blade angle and relays that information to the ECM. The ECM requires knowledge of throttle angle in order to generate the required injector control signals, or pulses.

- This connection will be a black 8 pin connector with yellow, black, brown, black/white, gray, green, purple, and light blue/black wires.
- The connection can be found on the passenger side of the throttle body.

INJ #1 - #8 – The fuel injector assembly is a solenoid operated device controlled by the ECM that meters pressurized fuel to a single engine cylinder. **An injector that has been sitting for more than 6 months will need to be cleaned/ replaced** as the varnish residue in the fuel will cause the injector to stick closed. **This will keep the injector from delivering fuel as needed by the injection system.**

These engines came from the factory with regular gas systems/injectors as well as flex fuel (E85) systems. The injectors found on the flex fuel systems differ from those found on the gas systems. Injector sub harnesses have been included with your Painless kit to work with both injector types. If using the flex fuel injectors, a fuel compensation sensor (**p. 15**), must be used.

- Locate the sub harness that matches your injector connection type.
- Plug this sub harness into the connector found on the Painless harness labeled “Fuel Injectors”, this connector can be found at the break out of the engine portion of the harness.
- Route and connect Injectors #1, #3, #5, and #7 down the driver side of the engine.
- Route and connect Injectors #2, #4, #6, and #8 down the passenger side of the engine.



FIGURE 17 Injectors 1. 3. 5. 7

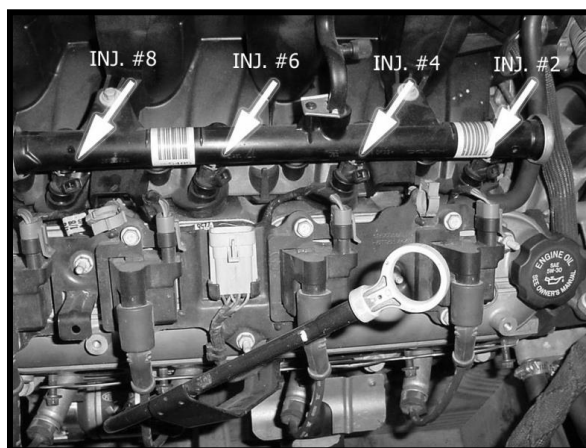


FIGURE 18 Injectors 2, 4, 6, 8

COOLING FAN(s)- 2005 and 2006 engines came from the factory with electric cooling fans. These fans are ground activated by the ECM according to engine temperatures read by the engine coolant temperature sensor. In order for the ECM to operate this circuit, your ECM must be flashed as a 2005 or 2006 vehicle. The on/off activation temperatures can be changed in the ECM programming to your liking.

- 2 wires have been provided for cooling fan operation, a white wire (low) and a blue wire (high). The blue wire is only needed if you have a dual fan setup and will cycle the separate fan individually.
- The white wire can be used to power a cooling fan. This wire comes from the 30-amp cooling fan relay found in the fuse block. This wire will only have power when the engine has come up to temperature and the ECM activates the relay.
- The blue wire is simply an activation wire for a separate fan relay. **This wire will not power a cooling fan;** it is a ground wire from the ECM which will only activate a fan relay. This wire will need to connect to the 86 or 85 terminal of a fan relay which is wired to be ground activated. Painless ECM Controlled Fan Relay kits (#30109 or #30133) are perfect for this.

TAIL/TRANSMISSION GROUP INSTALLATION

O2 Sensors Range, Park/Neutral Switch

GM# 12573005, 12587785, or equivalent
GM# 29540479

Locate the tail section that you earlier separated from the engine group. Begin routing it towards the rear of the vehicle. Be sure to avoid all sharp edges, moving or hot parts, or anything else that may damage the harness.

LEFT & RIGHT O2 SENSORS – The ECM uses the signal voltage from heated oxygen sensors in a Closed Loop to adjust the fuel injector pulse width. In Closed Loop, the ECM adjusts fuel delivery to maintain an air to fuel ratio which allows the best combination of emission control and drivability.

- Sensors used with the Painless harness must be GM# 12573005, 12587785, or equivalent.
- The connectors for the O2 sensors will be black 4-pin connectors with **PINK, PURPLE, BLACK, and TAN** wires. The driver side O2 connector will have white stripes on the wires.

BACK-UP – This circuit is used to power the back-up lamps. This wire will connect directly to the back-up light socket. You will need to splice a wire into this circuit in order to accommodate two back-up lights.

- This will be a single 3" long light green wire found on the Painless harness near the Park/Neutral Position Switch.
- This wire has been supplied to provide power to the back-up/reverse lights, these wires can be found in vehicles chassis harness. The chassis harness will have a 12v input and a 12v output to a reverse switch for reverse light functions. The 12v input is no longer needed.

FROM START SWITCH- This circuit is used to connect the ignition switch, start switch, or start button to the neutral safety switch. This will enable starting only if the transmission is in park or neutral. This is only applicable for those using a 4L60E, 4L65E, 4L80E, or 4L85E transmission.

- This will be a 3" long purple/white wire found on the Painless harness near the Park/Neutral Position Switch.
- Connect this wire to a circuit from the ignition switch "S" terminal or output side of a start switch/button. This wire should only have power in the start position.

FUEL PUMP- This circuit provides power to the electric fuel pump. The fuel pump you are using MUST maintain a constant pressure of 55-62 P.S.I. (pounds per square inch). '03 & '04 engine have a built-in regulator on the fuel rail as in many earlier GM fuel injection systems. '05 & '06 engines will require an external regulator.

- This wire will be an open ended, large gauge **GRAY** wire. It comes from the output side of the fuse block mounted fuel pump relay.
- Connect this wire to the positive side of the electric fuel pump.

FUEL COMPENSATION SENSOR- The fuel composition sensor, or flex fuel sensor, measures the ethanol-gasoline ratio of the fuel being used in a flexible fuel vehicle. Flexible fuel vehicles can be operated with a blend of ethanol and gasoline, up to **85 percent** ethanol. In order to adjust the ignition timing and the fuel quantity to be injected, the ECM requires information about the percentage of ethanol in the fuel. **This sensor must be used in order to run E85 fuel and your engine must be equipped with flex fuel injectors.** (2003-2005 engines only, 2006 ECMs must be flashed for a '05 in order to use the flex fuel feature)

- This connection will be a 3-pin brown connector with white, black, and pink wires. There is 10 feet of length to this section to allow for mounting of the sensor.
- The Fuel Compensation Sensor will mount inline of the fuel line to the engine, after the fuel pump if you are using an external pump.

TRANSMISSION FUNCTION

Whichever transmission you are using, **4L60E, 4L65E, 4L80E, or 4L85E transmission**, you must ensure the following components are connected correctly: vehicle speed sensor (VSS), transmission connector, park neutral position connectors and correct brake switch. These are necessary to make the transmission work correctly. These connections are only applicable for those using a 4L60E, 4L65E, 4L80E, or 4L85E transmission.

PARK NEUTRAL POSITION– The Transmission Range Switch (**PRND**) switch is mounted to the side of the transmission and is part of the Park Neutral Position (**PNP**) switch. The PRND switch is used by the ECM to indicate the actual gear selected. The PRND is made up of 4 individual switches. The scan tool indicates ON or OFF for each switch depending on the position of the gear selector lever. The combination of ONs and OFFs will indicate the gear selected. If the combination of ONs and OFFs is invalid, a DTC is set.

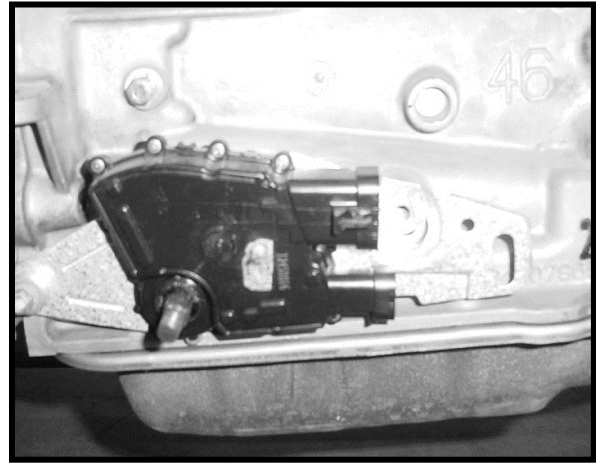


Figure 19 Park/Neutral Position Switch.

- The PNP can be found on the driver side of the transmission, as seen in **Figure 19**.
- If the switch on your transmission only requires one connector, '04-'06 transmissions, you must purchase **GM# 29540479**. This will be the correct switch that will work with the Painless harness.
- Connections to the PRND switch require the use of 2 connectors found on the Painless harness. One connection is a **WHITE** 4-pin connector with **WHITE, GRAY, YELLOW, and BLACK/WHITE** wires. The other connection is a 7-pin **GRAY** connector with **PINK, BLACK/WHITE, YELLOW, LT GREEN, and PURPLE/WHITE** wires.

OUTPUT SPEED SENSOR – The Vehicle Speed Sensor (**VSS**) is a pulse counter type output that informs the ECM how fast the vehicle is traveling. The VSS system uses an inductive sensor, mounted in the tail housing of the transmission, and a toothed reluctor wheel on the tail shaft. The teeth of the reluctor wheel alternately interfere with the magnetic field of the sensor creating an induced voltage pulse as the reluctor rotates.

- The Output Speed connector will be a **BLACK**, 2-pin connector with **LIGHT GREEN/BLACK** and **PURPLE/WHITE** wires. Do not get it confused with the Input Speed connector as both sensors share the same connector.
- The Output Speed Sensor location will vary depending on the transmission used. 4L60/65E transmissions have the sensor located on the driver side of the tail shaft, as seen in **Figure 20**. 4L80/85E transmissions have the sensor mounted on the driver side transmission case, seen in **Figure 21**

INPUT SPEED SENSOR – This connection is only used on the 4L80E/ 4L85E transmissions. This can be stowed if not needed.

- The Input Speed connector will be a black 2 pin connector with red/black and blue/white wires. Do not get it confused with the Output Speed connector as both sensors share the same connector.
- The Input Speed connector will be found at the front, driver side of the transmission case, as seen in **Figure 21**.

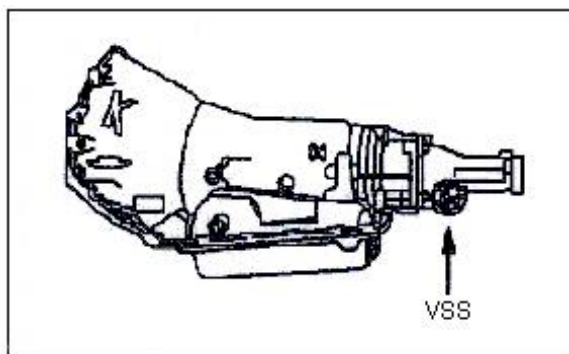


FIGURE 20 VSS Sensor (4L60E)

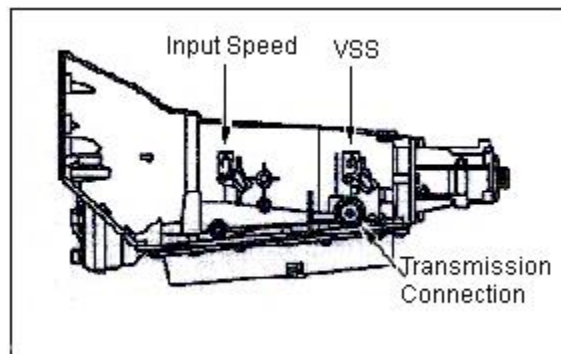


FIGURE 21 VSS & Input Speed Sensor, Transmission Connection (4L80E)

TRANS– These circuits are used by the ECM to determine vehicle speed, gear position and to control shift patterns.

- The Transmission connector will be a round, **GRAY**, 18-pin connector.
- The Transmission connector location will vary depending on the transmission used. 4L60/65E transmissions have the connection located on the passenger side, as seen in **Figure 22**. 4L80/85E transmissions have the connection on the rear of the driver side transmission case, seen in **Figure 21**. 4L80/85E will need to move 2 wires in this connector for proper operation, see the proceeding steps.

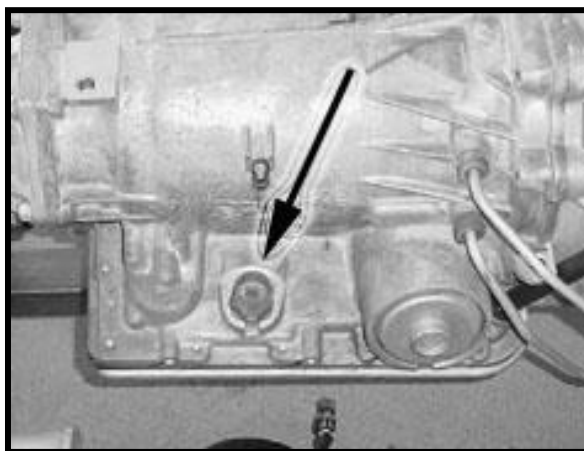


FIGURE 22 4L60E/65 E Transmission Connection

CONVERTING THE 4L60E TRANSMISSION CONNECTOR TO A 4L80E CONNECTOR

NOTE: All harnesses have the transmission connector pre terminated to allow use of the 4L60E transmission. In applications where a 4L80E is to be used, follow this procedure to change your transmission connector to ensure all functions of the transmission work properly. See **Figure 23** for re-pinning the transmission connector

- With the terminal end of the connector and the arrow on top pointing towards you, carefully remove the **WHITE** retaining lock located in the center of the connector.
- Locate the **WHITE** wire located in terminal location S. Using a paper clip or small screwdriver, gently lift the locking tab inside the connector and pull the wire from its location.
- Now locate the **BROWN** wire located in terminal location U. Using the same method, remove the **BROWN** wire from its location
- Gently insert the **BROWN** wire into terminal location S.
- The **WHITE** wire has no function with the 4L80E transmission; it needs to be taped up and stowed in the harness in case a 4L60E is ever to be used.

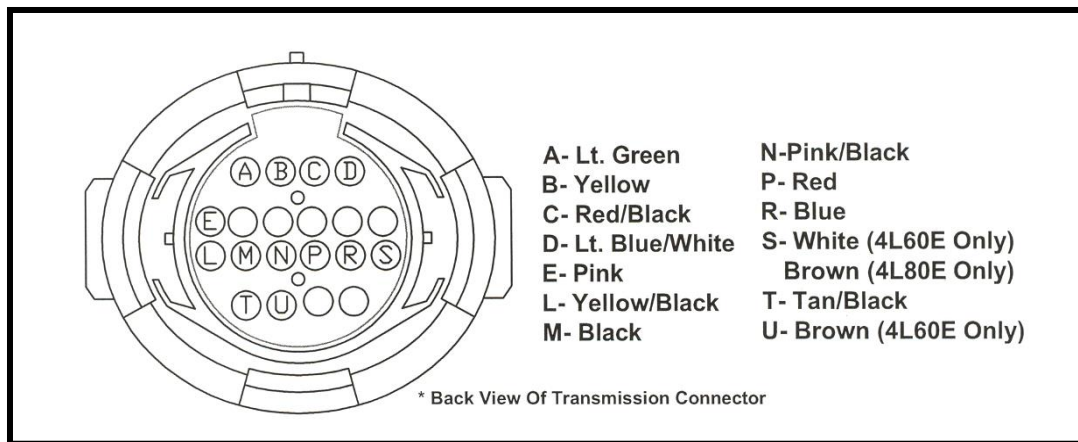


Figure 23 Transmission Connector Pin Out

CONCLUSION

At this point, all connections have been made. Only a few small procedures left and you will be ready to turn the key for the first time.

- Go back through the routing of your harness and tighten any loose zip ties and mounting locations.
- After all connections have been double checked and zip ties tightened, connect the battery.

CAUTION: BE SURE THE IGNITION IS OFF WHEN YOU RECONNECT THE BATTERY OR YOU WILL DAMAGE THE ECM.

- Now that the battery is connected, turn the ignition ON to prime the fuel system, DO NOT try to start the vehicle at this time. Let the fuel pump run until the ECM deactivates the fuel pump relay, this is normal. Cycle the fuel pump several times in this manner to ensure your fuel system is primed.
- With the fuel system primed it is now time to turn the key and start the engine.

THINGS TO REMEMBER

- **DO NOT DISCONNECT THE BATTERY OR THE COMPUTER CONNECTORS WHILE THE IGNITION IS ON.**
- **DO NOT SHORT ANY WIRES IN THIS HARNESS TO GROUND (WITH THE EXCEPTION OF LABELED GROUND WIRES) OR DAMAGE TO THE COMPUTER WILL RESULT.**
- **GIVING OR RECEIVING A "JUMP START" MAY DAMAGE THE ECM.**
- **DO NOT USE A TEST LIGHT WHEN TESTING COMPUTER SENSORS OR COMPUTER CIRCUITS. DAMAGE TO THE COMPUTER WILL RESULT!**
- **THERE IS A NORMAL, SMALL CURRENT DRAIN ON THE FUEL INJECTION SYSTEM.**

RETRIEVING TROUBLE CODES FROM THE COMPUTER

Diagnosing problems in modern automobiles can sometimes be very frustrating and confusing, especially when it involves computer-controlled systems. The fact is, for the most part automotive electronics have been proven quite reliable, and the greatest number of problems with new cars is the same kinds of problems that older cars without computer controls have.

Begin all troubleshooting by checking the basics. Certain basic faults may be undetectable by the ECM self-diagnostic system and can actually interfere with self-checking and fault memory operation. Low battery voltage, for example, can cause erroneous faults to set in ECM memory or can cause a system to go "Fail Safe" without setting a fault in memory. Because system faults memory is cleared whenever ECM or battery are disconnected, fault codes should be read prior to any vehicle power interruption or troubleshooting.

Before suspecting a computer problem, perform a careful visual inspection. Check under the hood for the same kinds of problems you would look for on a non-computer-controlled engine. These include fluid leaks, vacuum leaks, dirty filters, overheating, oil burning, poor connections or loose wires, bad spark plug wires and/or spark plugs, restricted mufflers and exhaust systems, worn mechanical parts, exhaust leaks, and other familiar kinds of problems. Be thorough! You may save a lot of time.

PROCEDURE

A Tech II or equivalent Scan tool **must be used** to check or clear Diagnostic Trouble Codes (**DTCs**) from the ECM memory. When clearing DTCs, follow the instructions supplied by the Scan tool manufacturer.

TROUBLE SHOOTING GUIDE FOR YOUR PAINLESS PERFORMANCE HARNESS

If you have installed your harness, made all the connections as outlined in the installation manual, and utilized the correct components as shown in the compatible parts list, the engine should start and run. If you are experiencing difficulties in getting the engine started, this trouble shooting guide should help you in diagnosing the problem.

- **FIRST AND FOREMOST, DO NOT TRY AND START YOUR ENGINE WITHOUT INSTALLING AND CONNECTING ALL OF THE COMPONENTS.** Attempting to do so will result in a "no start" situation. This includes things like the O2 sensors, knock sensors, the "PRNDL" switch (if it applies to your harness), relays, and the ECT. It's easy to try and skip connections just to see the engine fire up, but this could cause countless difficulties trying to diagnose the issue.
- Before you attempt to start the engine, be sure that you have the correct ECM for your harness. The correct ECM is listed in the "compatible Parts List" on **page 8**. Also, make sure that the ECM you are using has been programmed by someone who is familiar with the programming procedures required for the ECM used in an engine transplant. There is more involved in programming for an engine transplant than just turning off the vehicle anti-theft. It is important to have someone who knows these tuning procedures so that you can be confident your ECM's programming is correct for your application.

The first things to check if you are experiencing a "no start" situation, and your ECM has been programmed properly, are the battery (+) power to the harness and the grounds. Make sure the grounds are not stacked with each other. They can be on the same head or block area but should be bolted separately, not on top of each other. Also make sure that your vehicle is grounded properly, or your grounds will not do you any good. This means the negative battery cable should be bolted to the block or the frame using a star washer. The star washer allows your ground cable to cut through any paint and makes direct contact with the metal. Then, a ground strap (also using star washers) should be bolted from the block to the frame. Last, there should be a small ground strap from the block or head to the firewall. Only when these grounds are in place will the grounds for your harness be correct.

The battery (+) power to the harness should only come straight from one end of the positive battery cable, either at the battery or at the starter. The constant battery power is what provides power to the harness for the computer (ECM) memory. If it is not going to the positive battery cable, the ECM will have to relearn initial startup procedures every time you start it.

Last, make sure that the wire tagged “**12v IGN.**” wire is connected to an ignition hot source that has power **BOTH** in the ON/RUN position as well as the START position. An easy way to tell if you connected the wires to the correct power source is to look at the check engine light.

The check engine light has a direct correlation with the “**12v IGN.**” wire. If this wire is connected to the correct power source, the check engine light will come on when the key is turned to the ON/RUN position and will stay on when the key is turned all the way to the START position. If the light goes out in either of these ignition switch key positions, this means you are losing power to the “12v IGN” wire and must find another power source for it. The engine will never fire and start if this wire does not have the proper power source.

Also, make sure your check engine light is connected to the harness at the ALDL bracket. If you think you have connected the “**12v IGN.**” wire properly, and still do not have a check engine light when you turn the key on, check to see if the light is connected to the harness. Sometimes, the harnesses are not plugged into the light. The wires that connect to the light (**PINK** and **BROWN**) are tied together near the light. They are terminated so you can connect them to the 2 **BLACK** wires coming from the light.

FUEL PRESSURE: If you have checked all of the constant/switched power and your grounds but still have a “no start” problem, move onto the fuel system. The fuel pump should come on for a few seconds when you turn the key on and then shut off. This is to pressurize the fuel system, prepping it for start. If you turn the key on and do not hear the fuel pump come on and cycle, you need to check the fuel pump relay.

Make sure (as mentioned earlier) that the relay is plugged into the base. If it is plugged in properly, check to see if the relay might be defective. To do this, put 12 volts to the short wire marked “Test” coming out of the relay base. This wire is the same color as the wire providing power to the fuel pump. This “Test” wire will bypass the relay and apply 12 volts directly to the pump. If the fuel pump comes on when the 12 volts is applied, this tells you the relay is defective and needs to be replaced.

If your fuel pump does cycle with the key on you should check the fuel pressure. The fuel pressure should be about 58 to 60lbs. If it is not, you need a fuel pump that will deliver enough pressure to the injectors and the engine to run.

INJECTORS: LS injectors are susceptible to gumming up and sticking when the engine is left sitting for long periods of time (a year or more) with old fuel sitting in them. It is suggested that you clean the injectors if you do not know how long the engine has set.

If your injectors are clean and free, check to see if you have injector pulse. The best way to do this is to use a “**NOID LIGHT**” which can be found at any auto parts store. They are inexpensive and easy to use; you can buy a single light for the fuel injection system you are working on. Or you buy a set of 8 that will have a light for many different types of injectors. OEM offers singles (#25143 for the LS injectors) and Performance Tool offers a set of 6 (#W89500).

The light plugs into the injector connector. If you are getting an injector signal from the ECM, the light will flash. If the noid light does not flash, you are not getting the proper injector pulse signal from the ECM. This could be because the ECM is not getting the proper signal from the crankshaft position sensor, the ECM may have a bad driver, or one of the relays is either defective or not installed in the fuse block properly. These relays also control the coil power, and that is the next thing to check.



FIGURE 24 Noid Light

SPARK: if you have checked and cleared all of the previously mentioned components and still have a “no start” condition, you need to check for spark at the coils. You will need to test for 12 volts at the colored wire going to each coil. Then, check for continuity of the ground on the black wire going to each of the coils. If you do not have continuity to ground on the black wires, check the harness to the coils and the plug in the Painless harness to the coils. If all looks good there, you need to follow that wire back to its splice and then to the ground at the back of the block. Also, make sure the ground at the block is not stacked with any other ground on that bolt.

If all these things check out, you should be getting air/spark/fuel and that is what it takes to fire your engine. Remember, it does not pay to try and start your engine without everything installed and connected as it leads to undue frustrations.

Painless Performance Products, LLC

Limited Warranty and Return Policy

Chassis harnesses, fuel injection harnesses, and Trail Rocker units are covered under a lifetime warranty.

All other products manufactured and/or sold by Painless Performance are warranted to the original purchaser to be free from defects in material and workmanship under normal use. Painless Performance will repair or replace defective products without charge during the first 12 months from the purchase date. No products will be considered for warranty without a copy of the purchase receipt showing the sellers name, address, and date of purchase. You must return the product to the dealer you purchased it from to initiate warranty procedures.